



## 取扱説明書

本書は取付け作業前・ご使用前に必ずお読みください。  
取付けは必ず専門業者に依頼してください。  
お読みになった後は、大切に保管してください。

### 適合車両

本製品は下記に示す車両のみ取付け可能です。装着車種と適合車種を確認してください。

商 品 名	MAX GT
用 途	自動車専用部品
コード	80230-AT006 FULL KIT 80231-AT006 FRONT FULL SET 80232-AT006 REAR FULL SET 80233-AT006 FRONT DAMPER SET 80234-AT006 REAR DAMPER SET 80230-AT006T FULL R-SPG KIT
製品説明書品番	E04415-T34130-00
車 名	トヨタ アルテッツァ
型 式	SXE10・GXE10
エンジン形式	3S-GE・1G-FE
年 式	1998/10～2005/7
備 考	

# 目次

目次	
用語の説明	
改訂の記録	
本製品の取扱いについて	
はじめに	2
安全上の注意	2
お使いいただく前に	2
取付け時の注意	3
取付け後の確認	3
車高の調整	3
減衰力の調整	4
維持・管理	4
異常・故障時の対応	4
アフターサービス	4
廃却について	4
本製品の取付けについて	
セット内容の確認	5
ダンパーASSY構成図	6
フロントダンパーASSY取外し	7
フロントダンパーASSY取付け	8
リアダンパーASSY取外し	10
リアダンパーASSY取付け	11
減衰力調整方法	12
車高調整方法	13
開発車両データ	14

## 用語の説明

専門業者	: お買い上げ販売店及び取付けを依頼する整備工場・ショップ
コードNo.	: HKS製品及び部品を注文する際に使用する番号
点検・整備	: 本製品と自動車全体を安全に運転するために機能・性能を確認し、不具合部位を修理・調整すること
日常点検	: 自動車を運行する人が、一日一回運行前に行う点検 (日常点検及び点検項目は、メーカー発行のユーザーマニュアルに従って作業を行ってください。)
ノーマル車両	: 車両購入時の状態アフターパーツを取付けていない車両、事故を起こしたことの無い車両
メーカー	: 車両の製造メーカー
整備書	: メーカー発行の整備書
誤使用	: 加工及び分解・改造・用途外使用を含む誤使用
ASSY	: Assembly (アッセンブリ) の略

## 改訂の記録

改訂No.	発行月	記載変更内容
3 - 1 . 0 1	2012/6	初 版
3 - 1 . 0 2	2014/8	英文説明追加
3 - 1 . 0 3	2015/5	英文車両データ追加

# 本製品の取扱いについて

## はじめに

この度はHKS HIPERMAX SERIESをお買い上げいただき誠にありがとうございます。  
本製品を安全にご使用いただき、機能を十分に発揮させるために本書をお読みください。  
取付け終了後は本書に記載されている内容を守り、安全に使用してください。  
本書は取付けを行う前に必ず読み、よく理解したうえで作業を行ってください。

本書は本製品を安全に取付けていただき、お客様または第三者への危険や損害を未然に防止するため、守っていただきたい注意事項を示しています。

本製品はノーマル車両、HKS製品取付け車両を基準に開発されております。

適合車両以外に取付けた場合は、本製品の機能・性能及び安全性について保証いたしかねます。

お客様または第三者が本製品及び付属品を誤使用したことにより受けた損害については、当社は一切責任を負いかねます。

本製品の仕様は付属品を含め、改良のため予告なく変更することがあります。

本書は予告なく改版することがあります。


本書はお読みになった後も、本製品の側に置いてご活用ください。

## 安全上の注意

本書では、下記のような記号を使用しお客様への危険レベルを示しています。



作業員または使用者が、死亡または重傷を負う可能性がある場合



作業員または使用者が、傷害を負う危険が想定される場合（人損）拡大物損の発生が想定される場合（拡大物損とは、当該製造物が原因で誘発された物的損害（例えば車両の破損及び焼損））

## お使いいただく前に

本製品を正しくお取り扱いいただくために、下記の注意事項を必ず厳守してください。



- ・本製品の交換、車高の調整に際して、車載ジャッキを使用した車体の持ち上げは絶対に行わないでください。  
必ず自動車専用リフトかガレージジャッキとリジッドラックを使用してください。  
車載ジャッキを使用すると車体が不安定な状態となり、車両が落下してケガをしたり、最悪の場合は死亡する恐れがあります。
- ・本製品には窒素ガスが封入されています。分解したり、火に入れないでください。  
また、地面に落とす等の強い衝撃は与えないでください。分解・衝撃等で爆発する恐れがあります。

シリンダーの継ぎ目部分からオイルがにじむ場合がありますが、組立て時にOリングの外側に微量のオイルが残ったためににじみで異常ではありません。

倒立タイプのダンパーの底部分からグリスが出てくる場合がありますが、組立て時のグリスが残ったもので異常ではありません。そのまま使用されても問題はありますが、気になる場合はウエス等で拭き取ってください。

汚れがついている場合は市販されているブレーキクリーナ等をウエスにつけて拭き取ってください。

## 取付け時の注意

本製品の取付けは、必ず専門業者に依頼してください。

本製品の加工、改造は絶対に行わないでください。

ガス封入口から窒素ガスを抜いたり、充填しないでください。

本製品を交換する際は必ず左右（2本）同時に交換してください。

スプリング脱着作業には、スプリングコンプレッサーを使用してください。

スプリング脱着作業時は、スプリングコンプレッサーの引っ掛かり状態を確認して作業してください。

ダンパーのアップアマウントの取付け・取外しの際に、インパクトレンチは使用しないでください。

やむをえず使用する場合は、スプリングの反発力及びバネ下重量がダンパーに掛かり、ダンパーが伸び切った状態での作業は避け、スプリングが遊んでいる状態でダンパーを縮めて作業するか、もしくはジャッキ等を用いダンパーを縮めた状態で作業してください。

インパクトレンチの誤った使用により、内部部品の脱落または異音の発生する原因となる可能性があります。

- ・本書及び整備書に従ってノーマルダンパーASSYを取外してください。
- ・本書に従って車両に本製品を取付けてください。  
（ダンパーに左右があるものは、左右を区別するためのステッカーが貼付けてあります。）
- ・各ボルト・ナットを本書及び整備書に記載されている規定トルクで締付けてください。  
規定トルクで締付けられない場合、ボルト・ナットのネジ部破損や、ゆるみ、ダンパー内部破損の原因になります。

### ⚠ 注意

- ・本製品のシャフトを工具等でつかまないでください。油漏れの原因になります。
- ・六角穴付き皿ボルトをゆるめたり外したりしないでください。高圧ガスが噴出し、ダンパーの機能が失われます。
- ・スプリングが圧縮されている状態でスプリングコンプレッサーが脱落すると不測の方向に各部品が飛散し、負傷する恐れがあります。

## 取付け後の確認

下記の項目を確認してください。

- ・各ボルト・ナットが本書及び整備書に記載されている規定トルクで締付けられているか。
- ・ブレーキホースやABSセンサハーネス等が、他の部品と干渉やこすれないか。  
（オプションパーツとして汎用ブラケット：1799-SA010を設定してあります。）
- ・本製品にタイヤやホイール等、他の部品が接触していないか。

タイヤ及びホイールは、いかなる場合でもダンパー本体と干渉しないものを使用してください。本製品にタイヤやホイール等、他の部品が接触・干渉した状態で使用を続けると、油漏れや作動不良の原因になります。

スプリングは、スプリングシートの径に適合した製品を使用してください。

走行中に異音や異常な振動等の異変が生じた場合は、ただちに車両を停止し、取付けを依頼した専門業者へ点検を依頼してください。

## 車高の調整

調整を始める前に車両の各部分の温度が約40℃位（手で触れて熱くない程度）に下がっていることを確認してください。

車高調整方法は、ライドハイトアジャスターのネジ調整によって車高を調整するタイプと、ブラケットの位置（ケース長）を変更することで車高を調整する全長調整式タイプの2種類があります。

車高調整方法・調整範囲・変化量等については、本製品の取付けについて（P5～）をご覧ください。

車高調整時は、必ず専用のフックレンチを使用してください。専用のフックレンチ以外を使用した場合、スプリングシートやロックナットが破損する恐れがあります。

スプリングシート位置を変更する場合は、スプリングのセット荷重や車両の重量が掛からない状態で調整してください。

スプリングのセット荷重や車両の重量が掛かった状態でスプリングシートを調整するとネジ山を破損する恐れがあります。

車高調整後は、ダンパーと車体側の部品（ドライブシャフト・サスペンションアーム等）がダンパーの作動範囲内で干渉やこすれないか必ず確認し、干渉やこすれが認められた場合は干渉やこすれない位置で使用してください。

車高調整後は、伸び切り位置で必ずスプリングに遊びがないか確認してください。

車高調整後は、車両に車重を掛けた状態でスプリング上部がアップアマウント下側ガイド部に確実にガイドされている事を確認してください。

## 注意

- ・車両の各部分の温度が下がっていない状態で作業を行うと火傷を負う恐れがあります。
- ・車高調整は、取扱説明書に記載された調整範囲内で調整してください。記載された調整範囲外で使用した場合、車両やダンパーが破損する恐れがあります。
- ・スプリングに遊びのある状態で使用すると、スプリングが脱落する恐れがあります。

## 減衰力の調整

減衰力ダイヤルは30段あります。右回しに締込み、止まったところからクリック感が最初に感じられるところまで戻したところが0段となります。締込む際、クリック感に比べ過度に締込むと内部部品が破損し、調整不能になる恐れがあります。製品によっては30段以上戻す場合がありますが戻さないでください。内部部品の破損に繋がる恐れがあります。ダイヤル位置は左右同じ位置に調整してください。左右で異なるとハンドリングに悪影響を及ぼす恐れがあります。

## 維持・管理

快適に運転していただくために、必ずお車を運転する前に日常点検を行ってください。

日常点検はドライバーの責任です。必ず実施してください。

本製品取付け後は、ならし運転が必要です。50km前後を目安に速度を抑えて走行してください。

本製品使用期間中は、定期的に各部の締付け・車高・汚れ等を確認し、必要に応じて増し締め・調整・清掃を行ってください。経年変化によりピロボール・シャフト等が磨耗し、ダンパーの性能の低下や音が発生する場合があります。

ダンパー本来の性能を維持させるため定期的なオーバーホールをおすすめします。

## 異常・故障時の対応

故障の修理はお客様ご自身では対処せず、必ず専門業者に依頼してください。

走行中、異音・異臭・振動等の異変があった場合は、ただちに車両の運転を中止し、専門業者に修理を依頼してください。

## アフターサービス

本製品に関するお問い合わせ及びオプションパーツ・紛失部品の購入・オーバーホールのご依頼は、お買い上げの販売店にお問い合わせください。

本製品取付け後に修理・オーバーホール等が生じた場合、本製品（ダンパー単体）のみをお預かりさせていただく場合があります。修理・オーバーホール作業期間中にお車を使用される場合のために、取外したダンパーは保管しておくことをおすすめします。

## 廃却について

廃却する場合はお客様ご自身で対処せず、必ずお買い上げの販売店または専門業者に依頼してください。







オイルが飛散する場合がありますので、必ず安全メガネを着用し、作業してください。

# 本製品の取付けについて

取付け作業前に必ずお読みください。
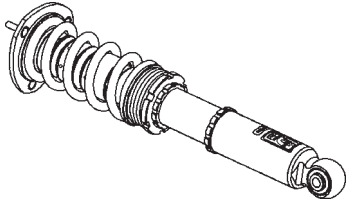
## セット内容の確認

取付け前に、下記のセット内容の有無・数量を確認してください。



			フロントダンパーASSY	2
			リアダンパーASSY	2
 汎用ブラケット (コード No. 1799-SA010)	 ホースバンド	2	 減衰力調整ダイヤル	1
	 ブラケット	2	 六角レンチ (1.5mm)	1
 減衰力調整 ケーブル	 ダイヤル	2	 フックレンチ (大)	2
	 アウターケース	2	 タイラップ	8
	 ワイヤーケーブル	2	 保証書	1
	 スクリュ	4	 取扱説明書 (本書)	1

タイラップは本製品取付け時、ケーブル等の固定に使用してください。

# ダンパーASSY構成図

## フロント

## リア

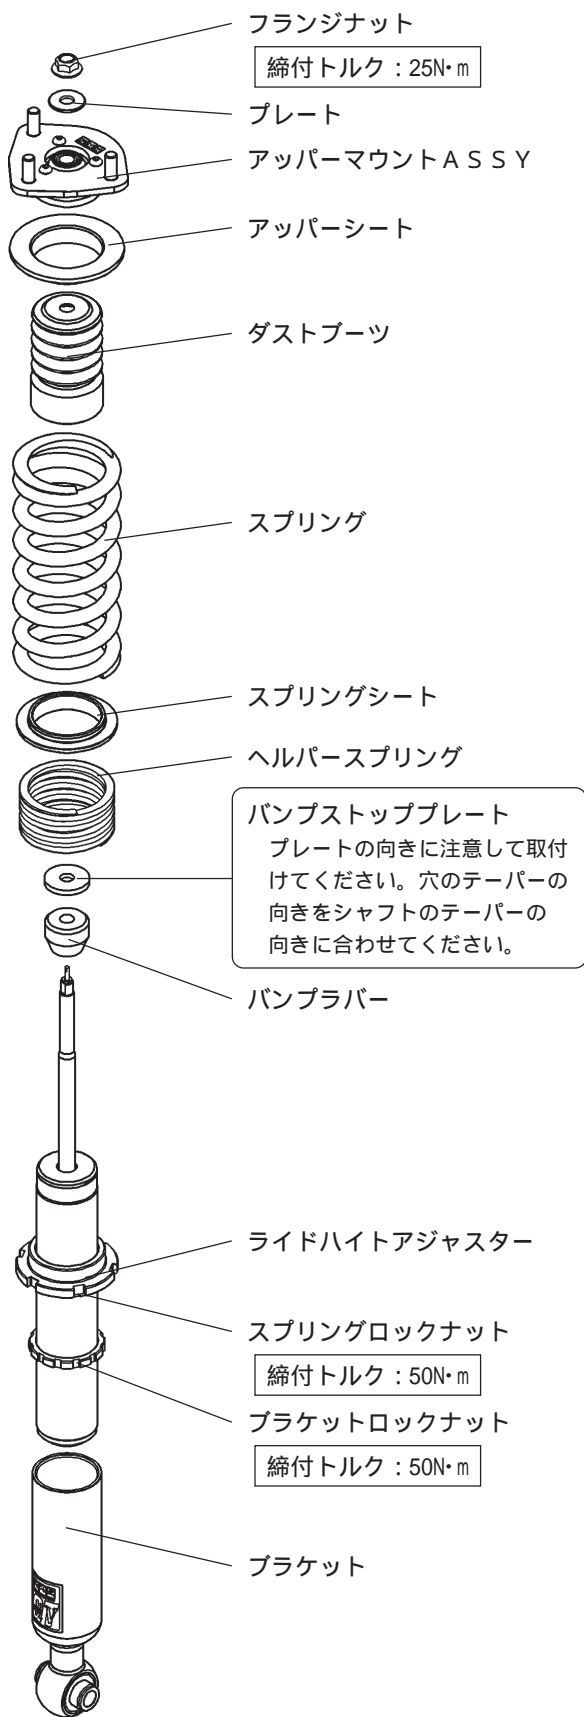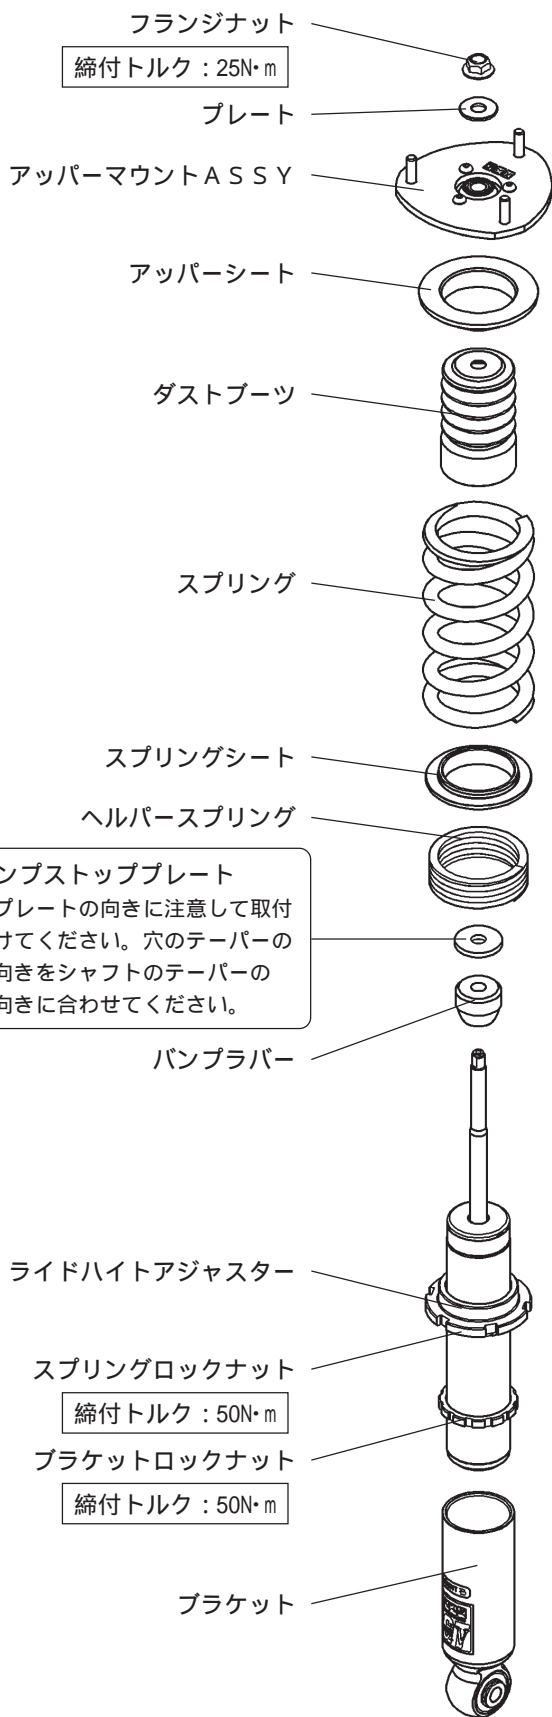

イラストと実際の製品とは形状が異なる場合があります。

## フロントダンパーASSY取外し

### ⚠ 警告

本製品の交換、車高の調整に際して、車載ジャッキを使用した車体の持ち上げは絶対に行わないでください。車載ジャッキを使用すると車体が不安定な状態となり、調整中に車両が落下してケガをしたり、最悪の場合は死亡する恐れがあります。必ず自動車用リフトか、ガレージジャッキとリジッドラックを使用してください。

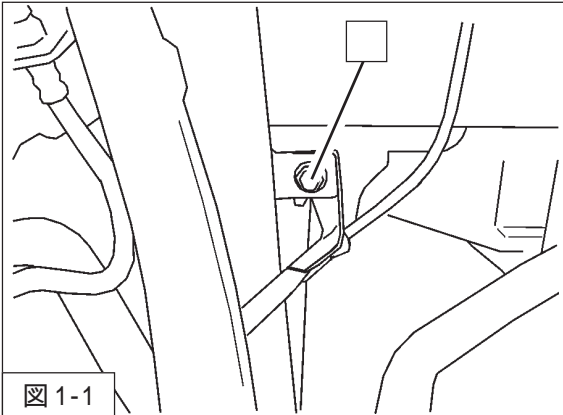


図 1-1

1. 車両をジャッキアップし、タイヤを取外してください。
2. ABSセンサーハネス取付ボルトを取外してください。(図1-1)

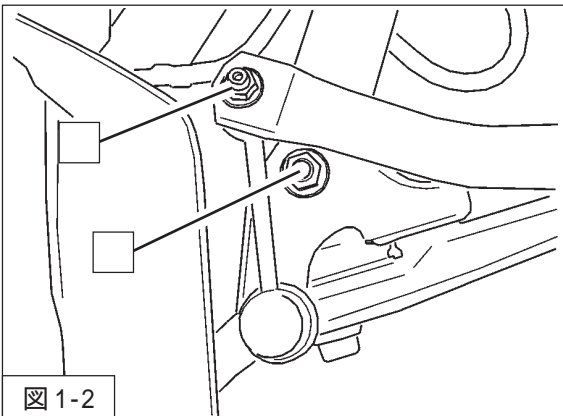


図 1-2

3. スタビライザリンク取付ナット  
ダンパーロア取付ボルト・ナット  
を取外してください。(図1-2)

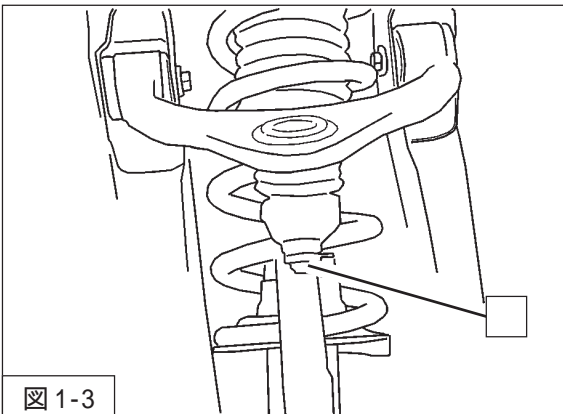


図 1-3

4. 割ピン・アッパーアームジョイントナット  
を取外し、アッパーアームとリンクを切り離してください。  
(図1-3)

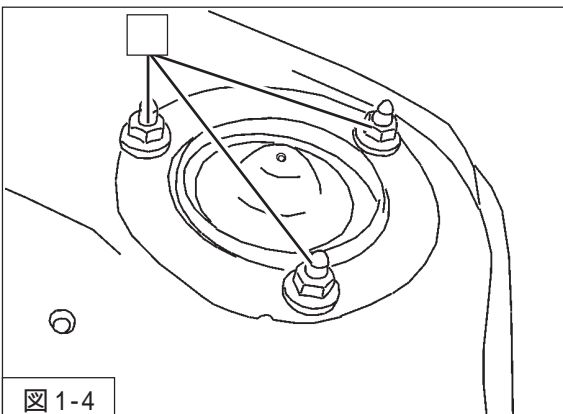


図 1-4

5. ダンパーアッパー取付ナット  
を取外してください。(図1-4)
6. ダンパーASSYを車両から取外してください。


ダンパーASSYを取外す際、ブレーキホース・ABSセンサーハネスを引っ張らないようにしてください。引っ張った場合、ブレーキの故障・破損の原因となります。



# フロントダンパーASSY取付け

## ⚠ 注意

各部の締付トルクは、本説明書指定値またはメーカー発行の整備要領書に従ってください。  
指定値に従わない場合ボルト・ナットのネジ部破損やダンパー内部破損の原因になります。

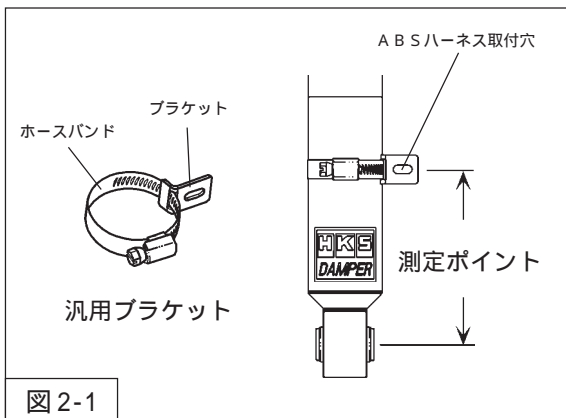


・取付けは取外しと逆の手順で行います。


1. 本製品にはABSセンサーハースを固定するため、汎用ブラケット（ブラケット+ホースバンド）を同梱しています。測定ポイントが純正ダンパーと同じ距離・位置になるように、汎用ブラケットをフロントダンパーASSYに固定してください。（図2-1）

### 汎用ブラケットの組付方法


1. ブラケットにホースバンドを通してください。
2. ブラケットをホースバンドで軽く締付けてください。

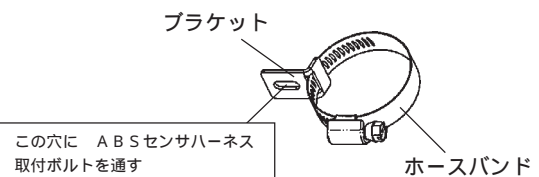


汎用ブラケット取付け後、ハンドルを切った時やダンパーストローク時に、ABSセンサーハースが引っ張られていないことを確認してください。  
ABSセンサーハースは引っ張られると断線する恐れがあります。

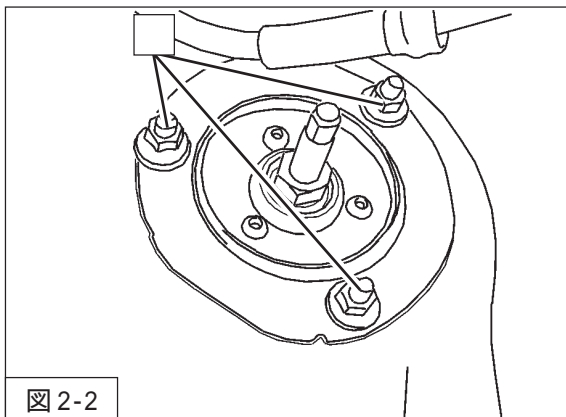

2. フロントダンパーASSY（同梱品）  
ダンパーアップー取付ナット（締付トルク：35N・m）  
を車両に取付けてください。（図2-2）

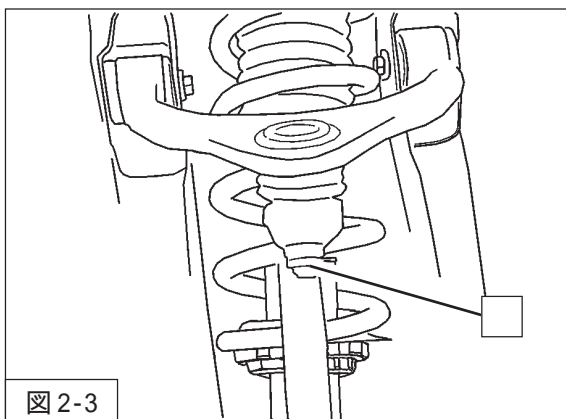


3. アッパーアームジョイントナット・割ピン（締付トルク：65N・m）  
を取付けてください。（図2-3）

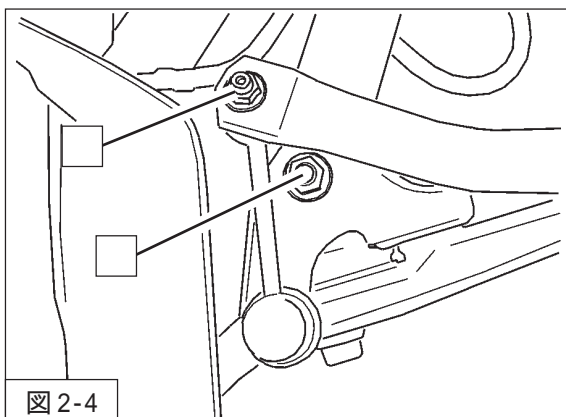

4. ダンパーロア取付ボルト・ナット（締付トルク：64N・m）  
スタビライザリンク取付ナット（締付トルク：74N・m）  
を取付けてください。（図2-4）

## フロントダンパーASSY取付け

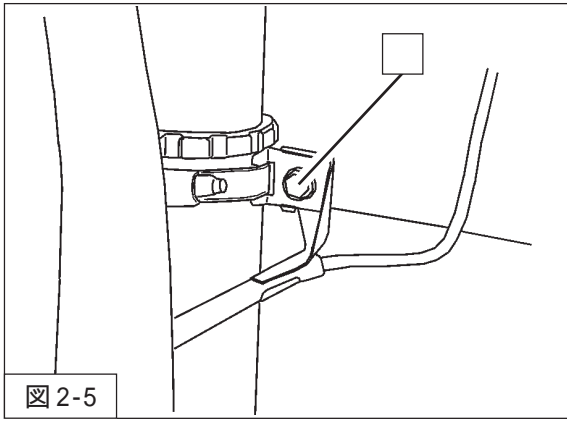

- 5 . ABSセンサーネス取付ボルト（締付トルク：8N・m）を使用して、ABSセンサーネスを取付けてください。（図2-5）
- 6 . タイヤを取付け、車両をジャッキからおろしてください。


### ⚠ 注意

- ・タイヤを取付け後、本製品がタイヤやホイール等、他の部品に接触していないことを確認してください。接触していると、油漏れや作動不良の原因になります。
- ・本製品に交換後は車高の変化に伴いアライメントに狂いが生じます。アライメントの狂いは走行安定性の低下やタイヤの偏磨耗などの悪影響を及ぼしますので、交換後は必ずアライメントを適正値に調整してください。


## リアダンパーASSY取外し

### ⚠ 警告

本製品の交換、車高の調整に際して、車載ジャッキを使用した車体の持ち上げは絶対に行わないでください。車載ジャッキを使用すると車体が不安定な状態となり、調整中に車両が落下してケガをしたり、最悪の場合は死亡する恐れがあります。必ず自動車用リフトか、ガレージジャッキとリジッドラックを使用してください。

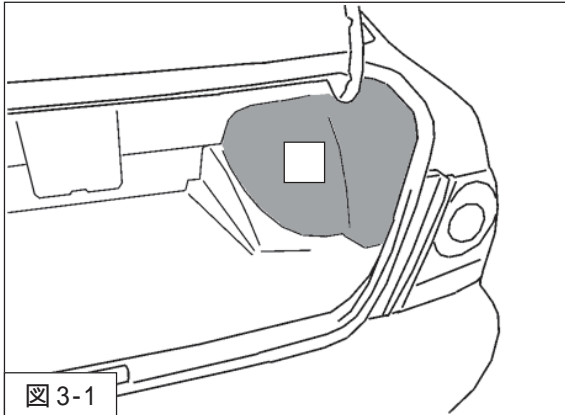


1. トランクトリムサイドカバー  
を取外してください。(図3-1)

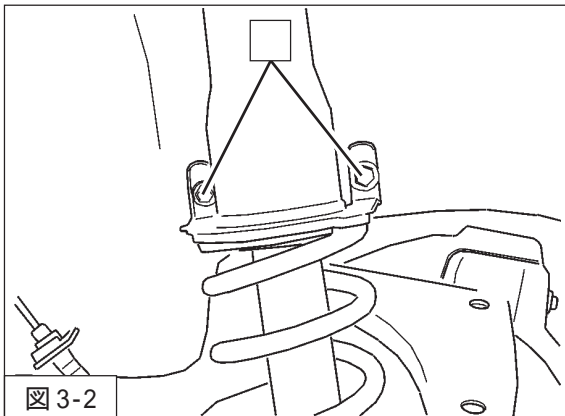


2. 車両をジャッキアップし、タイヤを取外してください。
3. サスペンションサポートボルト  
を取外してください。(図3-2)

本製品取付けの際、 サスペンションサポートボルトは  
使用しません。

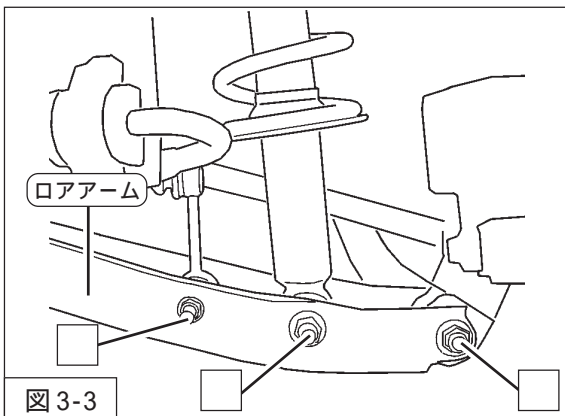

4. スタビライザリンク取付ボルト・ナット  
ロアアーム取付ボルト・ナット  
ダンパーロア取付ボルト・ナット  
を取外してください。(図3-3)

ロアアームのキャンバーアジャストボルトに印を付け、  
取付け時の目安にしてください。

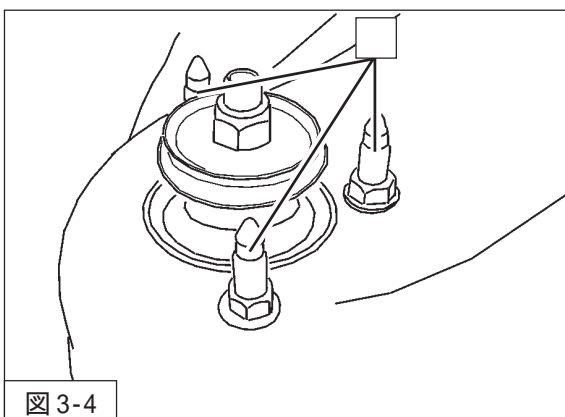


5. ダンパーアッパー取付ナット  
を取外してください。(図3-4)
6. ダンパーASSYを車両から取外してください。

ダンパーASSYを取外す際、ブレーキホース・ABSセンサーハースを引っ張らないようにしてください。  
引っ張った場合、ブレーキの故障・破損の原因となります。


## リアダンパーASSY取付け

### ⚠ 注意


各部の締付トルクは、本説明書指定値またはメーカー発行の整備要領書に従ってください。  
指定値に従わない場合ボルト・ナットのネジ部破損やダンパー内部破損の原因になります。

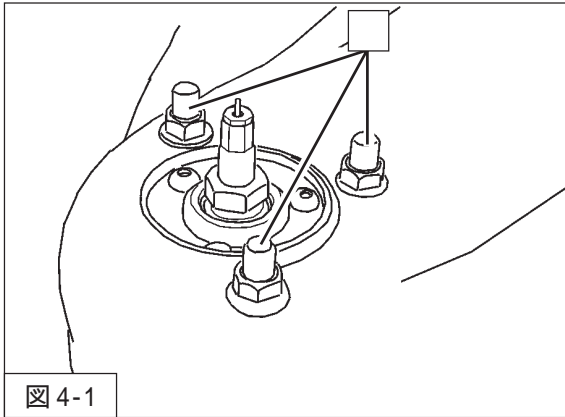

- ・取付けは取外しと逆の手順で行います。
- 1. リアダンパーASSY（同梱品）  
ダンパーアップー取付ナット（締付トルク：64N・m）  
を車両に取付けてください。（図4-1）

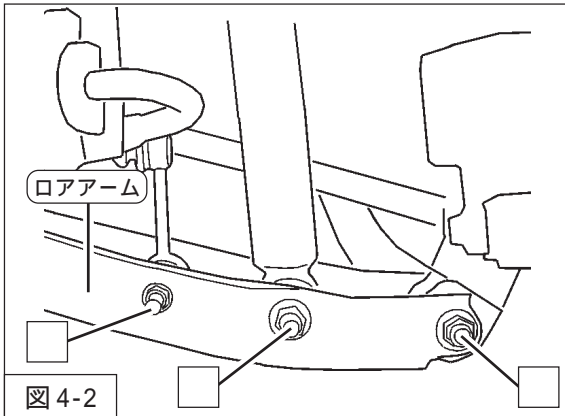

- 2. ダンパーロア取付ボルト・ナット（締付トルク：110N・m）  
ロアアーム取付ボルト・ナット（締付トルク：110N・m）  
スタビライザリンク取付ボルト・ナット（締付トルク：30N・m）  
を取付けてください。（図4-2）
- 3. タイヤを取付け、車両をジャッキからおろしてください。

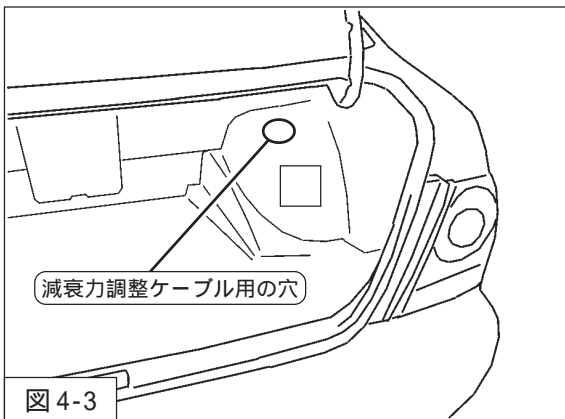

- 4. P12「減衰力調整方法」を参考に、  
トランクトリムサイドカバー  
に減衰力調整ケーブル取付用の穴を開け、  
減衰力調整ケーブル（同梱品）  
をリアダンパーASSYに取付けてください。  
穴はケーブルが曲がらないよう、シャフトの延長線上に開けて  
ください。（図4-3）
- 5. トランクトリムサイドカバー  
を車両に取付けてください。（図4-3）

### ⚠ 注意

- ・タイヤを取付け後、本製品がタイヤやホイール等、他の部品に接触していないことを確認してください。  
接触していると、油漏れや作動不良の原因になります。
- ・本製品に交換後は車高の変化に伴いアライメントに狂いが生じます。アライメントの狂いは走行安定性の低下や  
タイヤの偏磨耗などの悪影響を及ぼしますので、交換後は必ずアライメントを適正値に調整してください。

## 減衰力調整方法

本製品は、フロントダンパーASSY・リアダンパーASSYとも標準タイプとなっています。

リアの減衰力調整は、減衰力調整ケーブル（同梱品）を取付けて行ってください。

### 減衰力の調整と範囲

#### 標準タイプ

- ・シャフト上端部にダイヤルが取付けられているものは、そのダイヤルで調整してください。
- ・シャフト上端部に穴の空いているものは、同梱の減衰力調整ダイヤルを差込んで調整してください。

#### ストラットタイプ


- ・ダンパー底面に取付けられているダイヤルで調整してください。

#### 横調整タイプ


- ・ダンパー下部側面に取付けられているダイヤルで調整してください。

	最 弱	出荷時	最 強
MAX GT	最強より30段 戻した位置	最強より15段 戻した位置	軽く右回りに一杯締込み 左回りに少し戻し クリックした位置


最強を0クリックとする

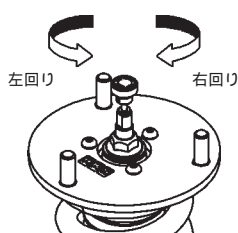


標準タイプ（ダイヤル付き）

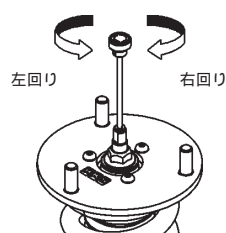

標準タイプ（同梱ダイヤル使用）

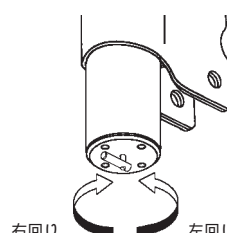


ストラットタイプ

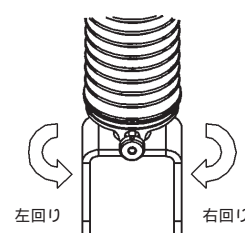

横調整タイプ

減衰力ダイヤルは30段あります。右回しに締込み、止まったところからクリック感が最初に感じられるところまで戻したところが0段となります。締込む際、クリック感に比べ過度に締込むと内部部品が破損し、調整不能になる恐れがあります。製品によっては30段以上戻す場合がありますが戻さないでください。内部部品の破損に繋がる恐れがあります。ダイヤル位置は左右同じ位置に調整してください。左右で異なるとハンドリングに悪影響を及ぼす恐れがあります。

### リア減衰力調整ケーブルの取付方法

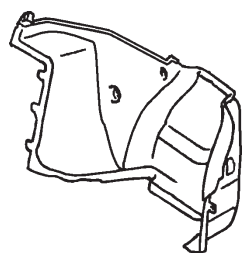

トランクトリムサイドカバー

図5-1

1. トランクルーム内のトランクトリムサイドカバーに減衰力調整ケーブル用の 10の穴を開けてください。（図5 - 1）

穴開け位置は車両により異なります。  
調整ケーブルが曲がらないよう、シャフトの延長線上に  
穴を開けてください。

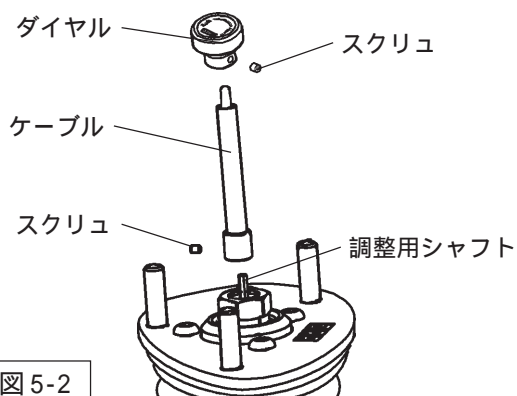


図5-2

2. 減衰力調整ケーブル（同梱品）からダイヤルを取外し、リアダンパーASSY先端の調整用シャフトにケーブルを取付けてください。（図5 - 2）
3. 調整用シャフト側面の平面部にスクリュの位置を合わせ、ケーブルを固定してください。スクリュの締付けは六角レンチ（1.5mm・同梱品）を使用してください。（図5 - 2）
4. トランクトリムサイドカバーを車両に取付け、穴にケーブルを通してください。（図5 - 1）
5. ケーブルにダイヤルを取付け、スクリュで固定してください。スクリュの締付けは六角レンチ（1.5mm・同梱品）を使用してください。（図5 - 2）

## 車高調整方法

出荷時、ライドハイトアジャスター及びブラケット位置は車検対応のHKS推奨車高となるようセットされています。  
本製品には、ライドハイトアジャスターとブラケットの2つの車高調整機構があります。

SXE10 車高データ (単位:mm)	FRONT						REAR					
	出荷時	テスト時	上限	下限	走行可上限	走行可下限	出荷時	テスト時	上限	下限	走行可上限	走行可下限
車高	633		674	603	649	603	634		668	559	668	559
車高ノーマル比	-41		0	-71	-25	-71	-34		0	-109	0	-109
ケース長	355		-	-	365	347	407		-	-	420	383
スプリングセット長	196		-	-	196	207	244		-	-	241	270
巻上げ寸法	81		-	-	91	62	65		-	-	88	15

数値は参考値です。車両の個体差、取付け条件等により変化することがあります。

### 【ケース長（車高）調整方法】

ブラケットとブラケットロックナットをゆるめてください。

ケース長を伸ばす時はスプリングロックナット、縮める時はライドハイトアジャスターを回転させて調整してください。


ブラケットとブラケットロックナットを規定トルクで締付けてください。

### 【スプリングセット長（プリロード）調整方法】

ライドハイトアジャスターとスプリングロックナットをゆるめてください。

ライドハイトアジャスターを回転させて調整してください。

ライドハイトアジャスターとスプリングロックナットを規定トルクで締付けてください。

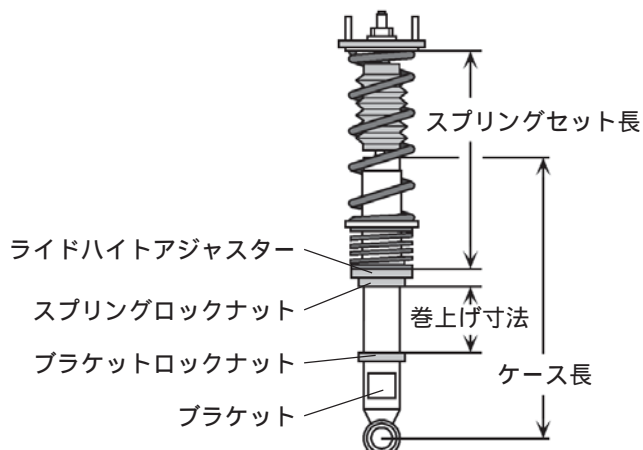

## 車高調整方法

### ⚠ 注意

ケース長等の調整幅には限度があります。表の値（上限・下限）を超えた状態で使用しないでください。  
 ダンパーの破損につながります。  
 またケース長等が限度内であっても、ダンパーのストローク範囲内において、アーム・タイヤ等の干渉が起きる可能性があります。  
 ケース長等を変更した場合は、走行前に必ず干渉の有無を確認してください。  
 干渉が起きる状態で走行すると、ダンパー及び車両の破損につながる恐れがあります。

#### 巻上げ寸法の調整量と車高変化量の関係

$$(\text{車高変化量}) \div (\text{レバー比}) = \text{巻上げ寸法の調整量}$$

例：S X E 10のフロントの車高を10mm下げたい場合

$$10\text{mm} (\text{車高変化量}) \div 1.57 (\text{レバー比}) = 6.36\cdots\text{mm} \text{ となり 約6mm巻上げ寸法を調整してください。}$$

レバー比とは？・・・車高調整時、ライドハイトアジャスターの調整量と車高の関係を示した数値で、  
 S X E 10の場合（フロント：1.57・リア：1.50）となります。

## 開発車両データ

本製品の開発に使用した車両データは下記のとおりです。

数値によっては、車両の個体差、組付け条件等により変化するものもありますので参考としてください。

トヨタ アルテッツァ(SXE10) 仕様：3S-GE			
項目	FRONT		REAR
車重 (カタログ値)	735 (740)	kg	636 (620) kg
レバー比	1.57		1.50
タイヤサイズ (空気圧)	215 / 45 - 17 ( 230 )		215 / 45 - 17 ( 230 )
ホイールサイズ	7 JJ x 17 off 50		7 JJ x 17 off 50
標準スプリング	直巻	170 mm	直巻 200 mm
バネレート	98 ( 10 )	N/mm (kgf/mm)	78 ( 8 ) N/mm (kgf/mm)
減衰力 伸/縮 (0.1m/s時)	1775 / 441	N	1049 / 177 N
ガソリン残量	FULL		
アライメント (トー/キャンバー)	テスト時	0 mm / -1° 12'	in 3 mm / -2° 00'
	基準値	in 1 ± 2 mm / -0° 30' ± 45'	in 2 ± 2 mm / -0° 55' ± 45'



株式会社エッチ・ケー・エス  
〒418-0192 静岡県富士宮市北山7181  
<http://www.hks-power.co.jp/>

( 禁無断複写、転載 ) ( 株 ) エッチ・ケー・エス

改訂No.	発行月
3-1.03	2015/5















## Installation Guide

**This manual assumes that you have and know how to use the tools and equipment necessary to safely perform service operations on your vehicle. This manual assumes that you are familiar with typical automotive systems and basic service and repair procedures. Do not attempt to carry out the operations shown in this manual unless these assumptions are correct. Always have access to a factory service manual. To avoid injury, follow the safety precautions contained in the factory service manual.**

### Vehicles Application Chart

<b>Product</b>	<b>MAX IV GT</b>
<b>Product Category</b>	<b>AUTOMOBILE PARTS</b>
<b>Part No.</b>	<b>80230-AT006 FULL KIT</b> <b>80231-AT006 FRONT FULL SET</b> <b>80232-AT006 REAR FULL SET</b> <b>80233-AT006 FRONT DAMPER SET</b> <b>80234-AT006 REAR DAMPER SET</b> <b>80230-AT006T FULL R-SPG KIT</b>
<b>Manual Number</b>	<b>E04415-T34130-00</b>
<b>Vehicle</b>	<b>TOYOTA ALTEZZA</b>
<b>Model</b>	<b>SXE10 · GXE10</b>
<b>Engine</b>	<b>3S-GE · 1G-FE</b>
<b>Remarks</b>	

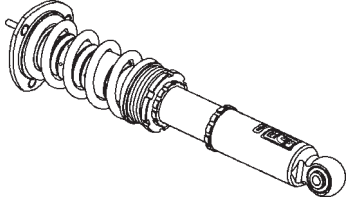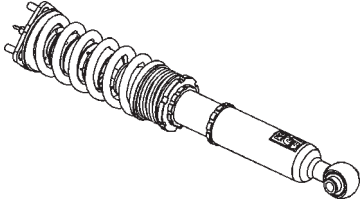

## Parts List

			Front Damper Assy	2
			Rear Damper Assy	2
 Universal Bracket (Part No. 1799-SA010)		2	Adjustment Dial	1
		2	Allen Wrench	1
		2	Spanner Wrench (Large)	2
		2	Tie Wrap	8
		2	Warranty Certificate	1
		4	Installation Guide	1

# Damper Components

## FRONT

## REAR

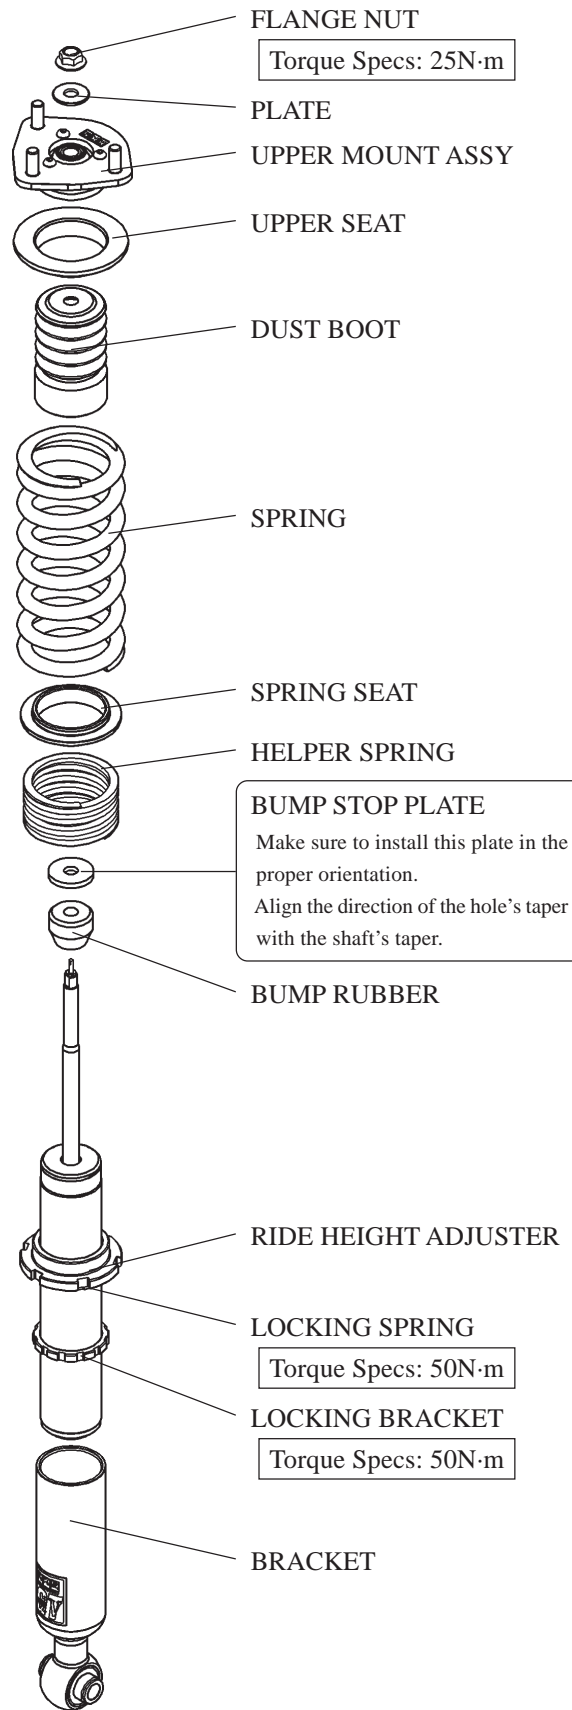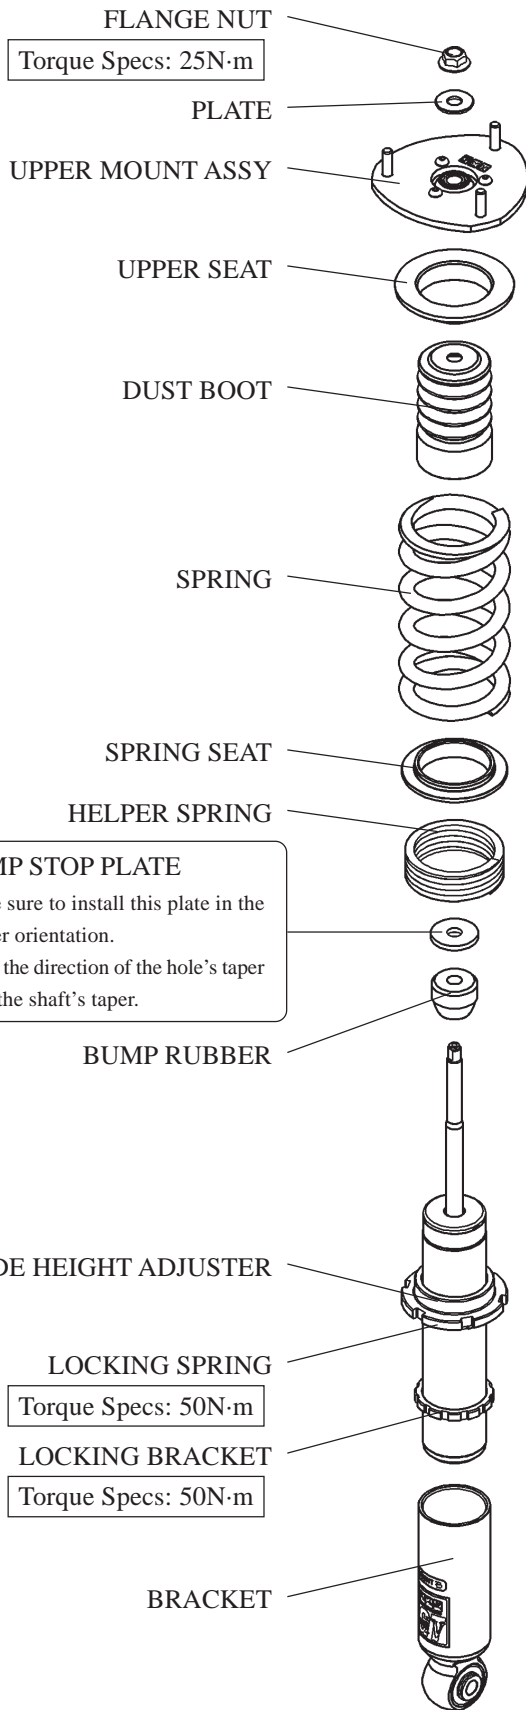


**!** CAUTION

- Perform installation after the vehicle has cooled down sufficiently.
- For height adjustments, only adjust height within the range specified in this manual.  
If adjusted above or below the specified range, the damper and/or vehicle may become damaged.
- If there is too much play in the springs, the springs may fall off of the spring seats and cause damage to the dampers and/or vehicle.


## 1. Removing the Factory Front Dampers

**!** WARNING


When installing this product, do not use scissor-jacks supplied with the vehicle. Use of unstable scissor-jacks can lead to severe bodily injury or death. Always use vehicle lifts/hoists or garage jacks with jack-stands.

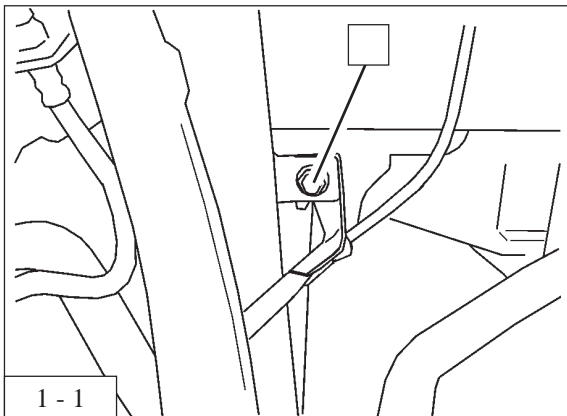

1. Jack up the vehicle, and remove wheels.
2. Remove the ABS sensor harness installation bolt .  
(Diagram 1-1)

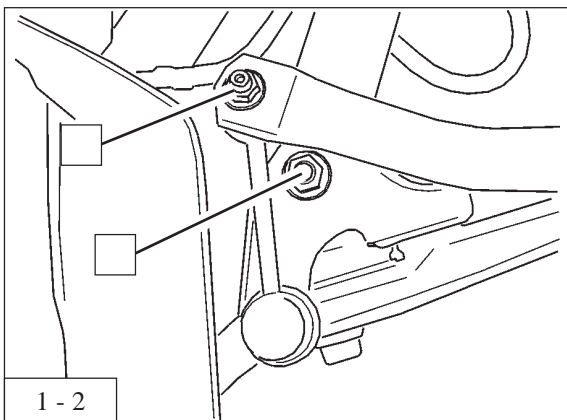


3. Remove the following:  
The stabilizer link nut  
The bolt and nut from the lower damper .  
(Diagram 1-2)

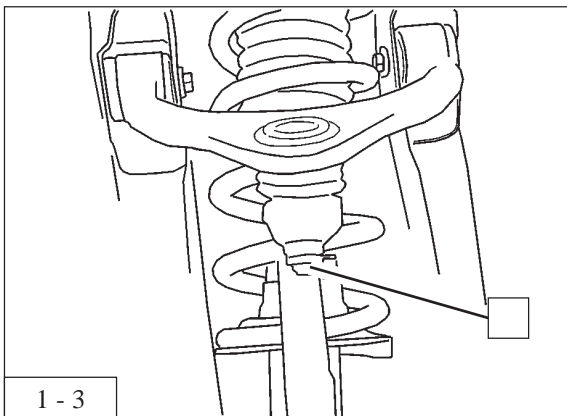

4. Remove the split pin and upper arm joint nut .  
Remove the link from the upper arm.  
(Diagram 1-3)

## 1. Removing the Factory Front Dampers

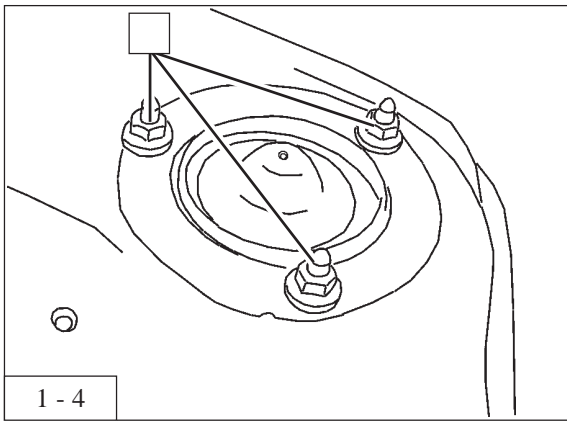

5. Remove the nuts from the upper damper .  
(Diagram 1-4)
6. Remove the factory damper assy from the vehicle.


### NOTICE

When removing the factory damper assy, make sure not to pull on the brake line and ABS sensor. When these are pulled, it may damage the brakes.

## 2. Installing the Front Dampers

### NOTICE


Refer to the service manual for torque specs when tightening bolts and nuts. Make sure to tighten the bolts and/or nuts to the specified torque to avoid the damage to the bolts, nuts and/or damper internals.

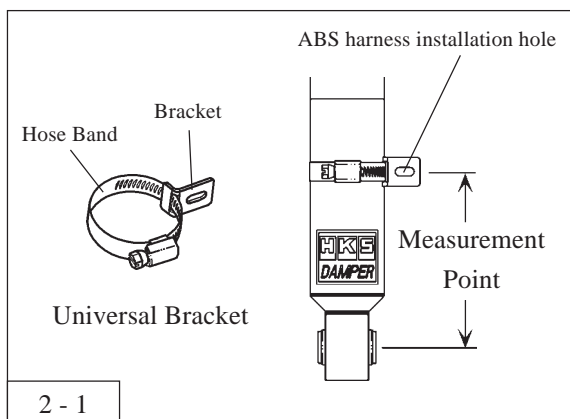


1. A universal bracket (a bracket & hose band) is included in this product to secure the ABS sensor harness. Secure the universal bracket to the front damper assy where the measurement point can be the same position and distance as the factory damper. (Diagram 2-1)

#### Assembly of Universal Bracket


1. Pass the hose band through the bracket.
2. Lightly tighten the hose bracket.

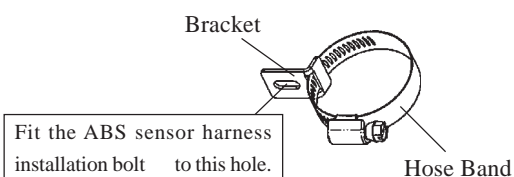


After installing the universal bracket, make sure tension is not applied to the ABS sensor harness when a steering wheel is turned and/or damper is stroking.

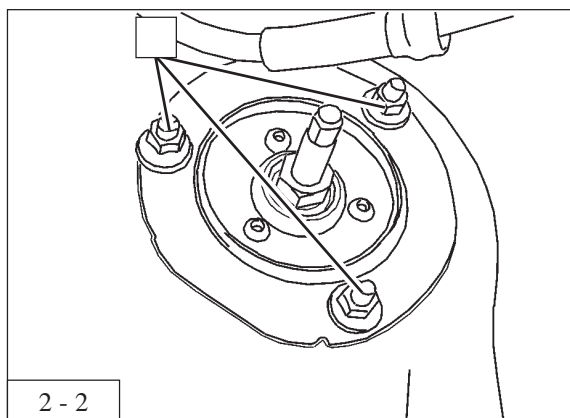

2. Install the provided front damper assy to the vehicle using the upper damper installation nuts . (Torque Specs: 35N·m) (Diagram 2-2)

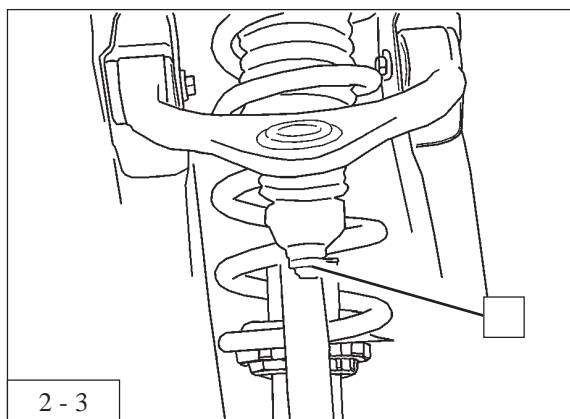


3. Install the upper arm joint nut and split pin. (Torque Specs: 65N·m) (Diagram 2-3)

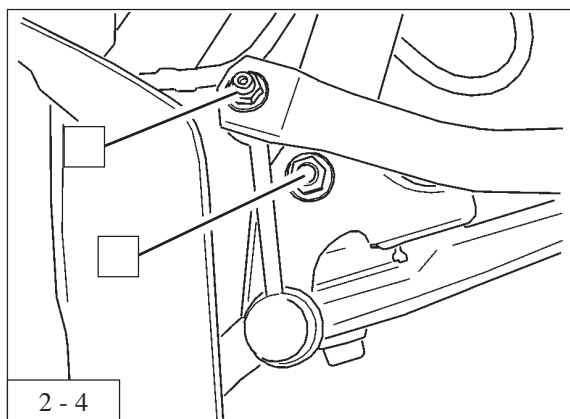

4. Install the following:  
The bolt and nut for the lower damper (Torque Specs: 64N·m)  
The stabilizer link nut (Torque Specs: 74N·m). (Diagram 2-4)

## 2. Installing the Front Dampers

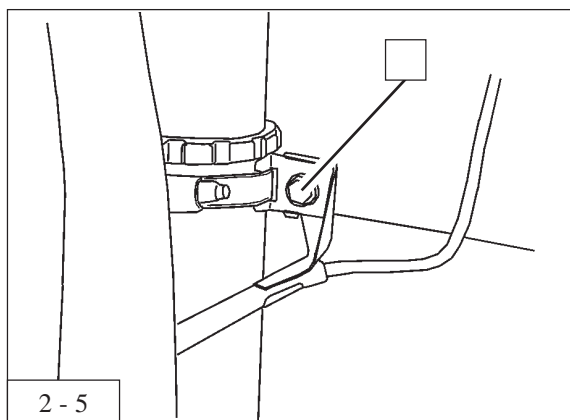

5. Install the ABS sensor harness using the ABS sensor harness installation bolt . (Torque Specs: 8N·m)  
(Diagram 2-5)
6. Mount the wheels back on, then lower the vehicle.




### CAUTION

After re-mounting the tires, make sure the product does not come into contact with the wheels/tires.  
Re-alignment is required after installation of this product.


### 3. Removing the Factory Rear Dampers

#### **WARNING**


When installing this product, do not use scissor-jacks supplied with the vehicle. Use of unstable scissor-jacks can lead to severe bodily injury or death. Always use vehicle lifts/hoists or garage jacks with jack-stands.

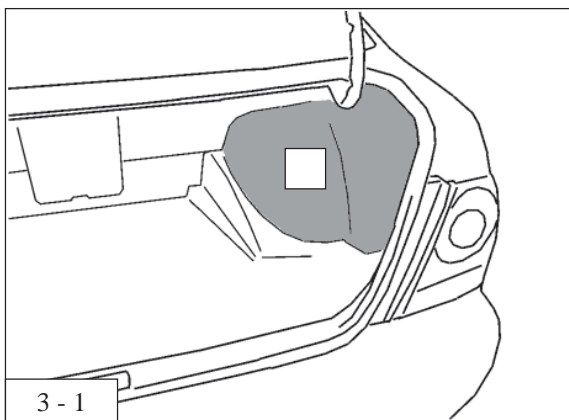


1. Remove the trunk trim side cover . . .  
(Diagram 3-1)

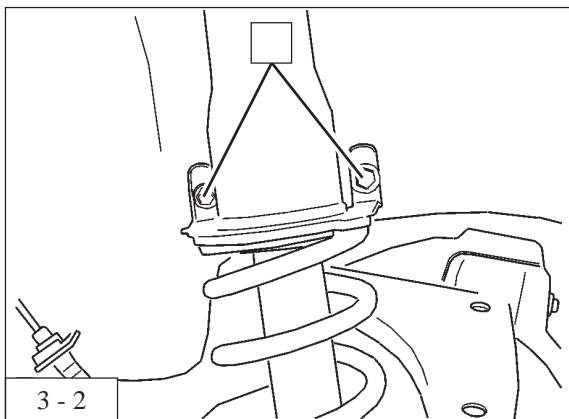

2. Jack up the vehicle, and remove wheels.
3. Remove the suspension support bolts . . .  
(Diagram 3-2)  
\* The removed suspension support bolts are not reused to install this product.

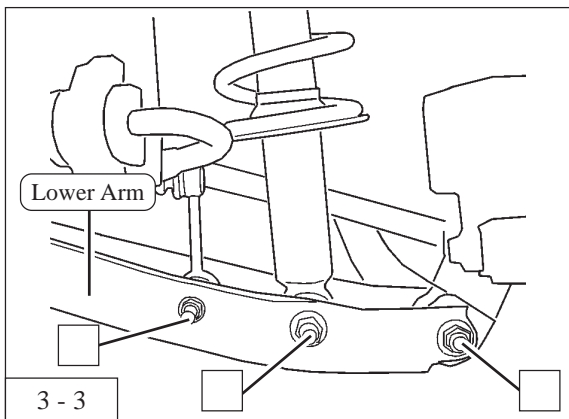

4. Remove the following:  
The stabilizer link bolt and nut  
The bolt and nut from the lower arm  
The bolt and nut from the lower damper . . .  
(Diagram 3-3)  
\* Mark the camber adjustment bolt of the lower arm for indication of installation.

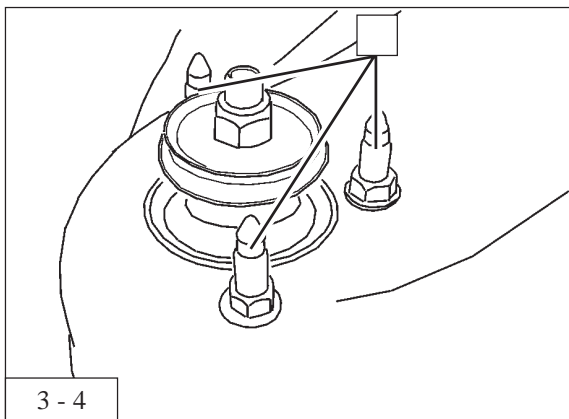

5. Remove the nuts from the upper damper . . .  
(Diagram 3-4)
6. Remove the factory damper assy from the vehicle.

#### **NOTICE**


When removing the factory damper assy, make sure not to pull on the brake line and ABS sensor. When these are pulled, it may damage the brakes.




## 4. Installing the Rear Dampers

### NOTICE

Refer to the service manual for torque specs when tightening bolts and nuts. Make sure to tighten the bolts and/or nuts to the specified torque to avoid the damage to the bolts, nuts and/or damper internals.

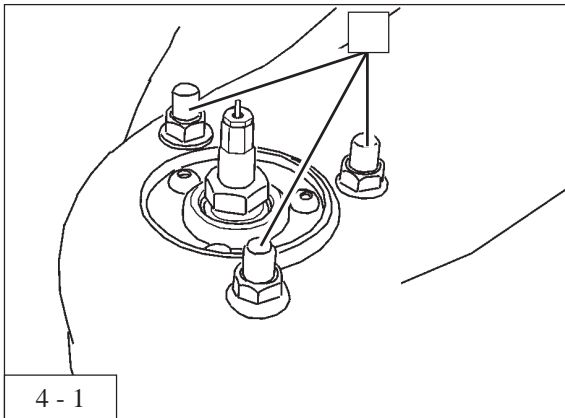


1. Install the provided rear damper assy to the vehicle using the upper damper installation nuts . (Torque Specs: 64N·m)  
(Diagram 4-1)

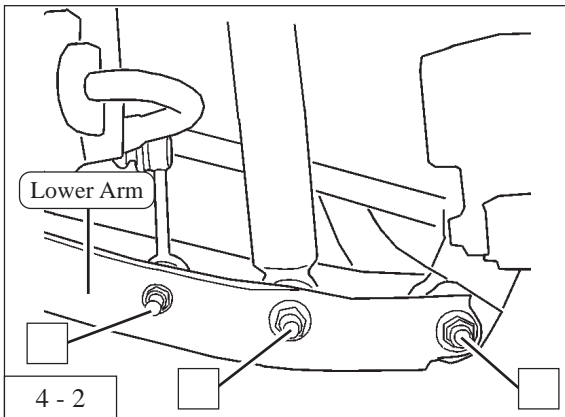

2. Install the following:  
The bolt and nut for the lower damper (Torque Specs: 110N·m)  
The bolt and nut for the lower arm (Torque Specs: 110N·m)  
The stabilizer link bolt and nut (Torque Specs: 30N·m).  
(Diagram 4-2)

3. Mount the wheels back on, then lower the vehicle.

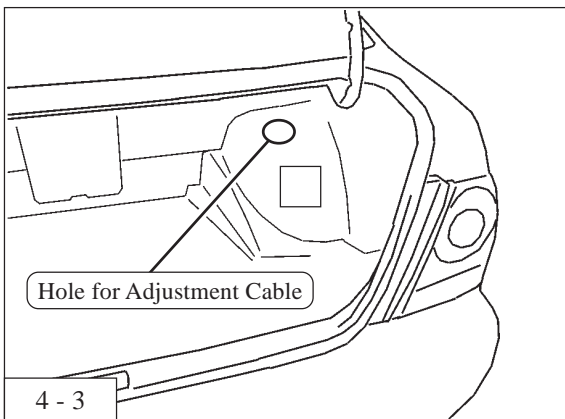

4. Make a hole in the trunk trim side cover to install the adjustment cable referring to “6. Installing the Rear Damper Adjustment Cable and Dial” on page 10.

Install the provided adjustment cable to the rear damper assy. Make sure to make a hole on the extension of the shaft so the cable does not bend.

(Diagram 4-3)

5. Install the trunk trim side cover to the vehicle.  
(Diagram 4-3)

### CAUTION

After re-mounting the tires, make sure the product does not come into contact with the wheels/tires. Re-alignment is required after installation of this product.

## 5. Adjusting the Dampening

### Dampening adjustment and range

The standard strut type

- For a damper that a dial is attached to the shaft's top, use the dial for adjustment.
- For a damper that has a hole on top of the shaft, insert the provided adjustment dial to the hole to adjust the dampening force.

The MacPherson strut type

- Use the dial attached to the bottom of the damper for adjustment.

The side adjusting strut type

- Use the dial attached to the side of the damper's lower part.

	Softest Setting	Initial Setting	Stiffest Setting *
<b>MAX IV GT</b>	30 clicks back from the stiffest setting	15 clicks back from the stiffest setting	Lightly turn the dial fully clockwise; then, turn it back counterclockwise until the first click. The damper is now set at the stiffest point.

\* Stiffest is the 0 click position


The adjustment dial has 30 steps. Lightly turn the dial full to clockwise; then, slightly turn it back to counterclockwise. The point where it clicks first is the stiffest point (0 click position). Over-tightening beyond the torque required for click adjustment can cause damage to the internal parts making dampening adjustment impossible.

Do not over-turn the dial; depending on the product, the dial may be turned counterclockwise more than 30 steps.


Over-turning may cause damage to the internal parts.

The dial positions of the right and left sides must be the same. If neglected, it may cause handling problems.

#### Standard Strut Type

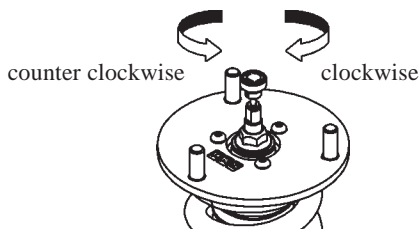


Turn the dial attached to the shaft's top

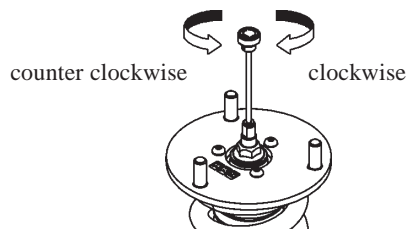


Use the provided adjustment dial


#### MacPherson Strut Type

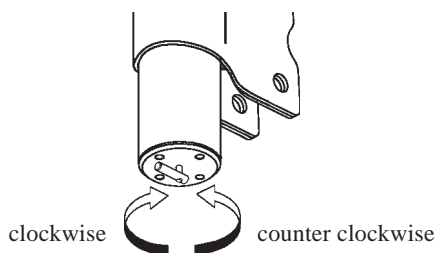

#### Side Adjusting Strut Type

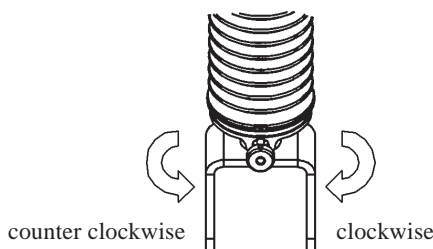

## 6. Installing the Rear Damper Adjustment Cable and Dial

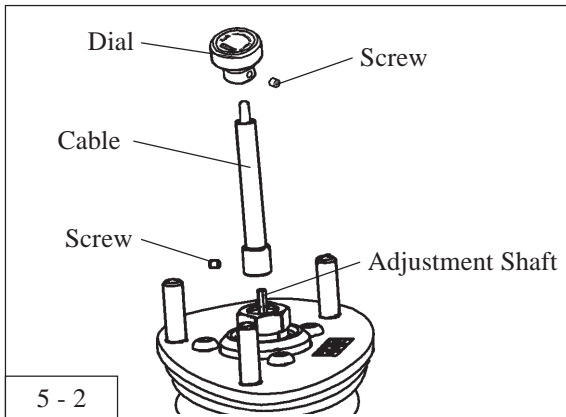

1. Make a 10mm hole for the adjustment cable in the trunk trim side cover.

(Diagram 5-1)

The position of the hole may vary depending on the vehicle. Make a hole to be an extension of the shaft so the adjustment cable does not bend.

2. Remove the dial from the provided adjustment cable. Install the cable to the adjustment shaft on the tip of the rear damper assy.

(Diagram 5-2)

3. Adjust the screw's position to the flat section of the adjustment shaft's side. Use the provided Allen wrench to tighten the screw.

(Diagram 5-2)

4. Install the trunk trim side cover to the vehicle, and route the cable through the hole.

(Diagram 5-1)

5. Tighten the screw to attach the dial to the cable using the provided Allen wrench.

(Diagram 5-2)

## 7. Adjusting the Ride Height

HKS has preset the ride height prior to shipment.

SXE10 Vehicle Height Data (inch)	FRONT				REAR			
	When Shipped	During Testing	Upper Limit	Lower Limit	When Shipped	During Testing	Upper Limit	Lower Limit
Height	24.9		25.6	23.7	25.0		26.3	22.0
Height From Factory	-1.6		-1.0	-2.8	-1.3		0.0	-4.3
Shock Body Length	14.0		14.4	13.7	16.0		16.5	15.1
Spring Length	7.7		7.7	8.1	9.6		9.5	10.6
Thread Length	3.2		3.6	2.4	2.6		3.5	0.6

SXE10 Vehicle Height Data (mm)	FRONT				REAR			
	When Shipped	During Testing	Upper Limit	Lower Limit	When Shipped	During Testing	Upper Limit	Lower Limit
Height	633		649	603	634		668	559
Height From Factory	-41		-25	-71	-34		0	-109
Shock Body Length	355		365	347	407		420	383
Spring Length	196		196	207	244		241	270
Thread Length	81		91	62	65		88	15

### Check the following when the vehicle height is changed.

- Make sure there is no play in the spring when the damper is fully extended.
- Make sure the damper does not come in contact with any part of the vehicle chassis.  
(ex. driveshaft, suspension arm, etc.)



### CAUTION

There is a limit to shock body length adjustment. Do not exceed the minimum or maximum figures as calculated in the table above. Using the vehicle with the dampers exceeding minimum or maximum shock body length adjustment can cause damage to the dampers.

Further, check for any contact between the dampers and suspension arms, wheels, etc. If driven while these parts are coming into contact with the dampers can cause damage to the dampers and/or the vehicle.

### Thread Length Adjustment/Vehicle Height Change

$$\text{Height to be lowered} \div \text{Lever Ratio} = \text{Amount of Thread Length Adjustment}$$

Example: If the vehicle height of SXE10 is intended to lower by 10mm:

$$10\text{mm (Height to be lowered)} \div 1.57 \text{ (Lever Ratio)} = 6.36\dots\text{mm}$$

Therefore, adjust the thread length by approximately 6mm.

Lever Ratio: A ratio of the vehicle's height to the ride height adjuster's adjustment amount.  
(SXE10 – Front 1.57 / Rear 1.50)


## 7. Adjusting the Ride Height

### [Shock Body Length Adjustment]

- (1) Loosen the Bracket and the Locking Bracket.
- (2) To set height, turn the Locking Spring to lengthen Shock Body Length, and turn the Ride Height Adjuster to shorten Shock Body Length.
- (3) When the desired height is obtained, securely tighten the Bracket and Locking Bracket using the provided Spanner Wrench to specified torque specs.

### [Spring Length (Preload) Adjustment]

- (1) Loosen the Ride Height Adjuster and the Locking Spring.
- (2) Turn the Ride Height Adjuster to set height.
- (3) When the desired height is obtained, securely tighten the Locking Spring against the Ride Height Adjuster using 2 Spanner Wrenches to specified torque specs.

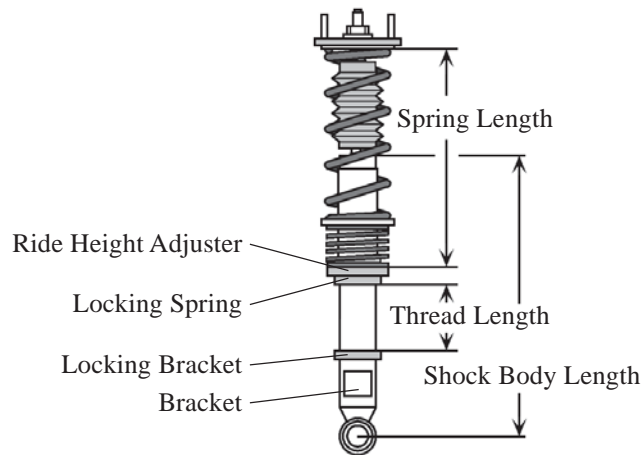

## 8. Development Vehicle Data

Data from the test vehicle during development of this product is as follows.

Please note that there may be small fluctuations between each car.

TOYOTA ALTEZZA (SXE10) Spec : 3S-GE			
Category	FRONT		REAR
Vehicle Weight (Catalog)	1620 (1631)	lbs	1402 (1367) lbs
Lever Ratio	1.57		1.50
Tire Size (Air Pressure)	215 / 45 - 17 ( 33 PSI )		215 / 45 - 17 ( 33 PSI )
Wheel Size	7 JJ × 17 off 50		7 JJ × 17 off 50
Default Spring	Straight Type 6.7 ( 170 ) inches (mm)		Straight Type 7.9 ( 200 ) inches (mm)
Spring Rate	560 ( 10 )	lbs/inch (kgf/mm)	448 ( 8 ) lbs/inch (kgf/mm)
Dampening Force ex/comp (@ 0.1m/s)	1775 / 441	N	1049 / 177 N
Fuel Level	FULL		
Alignment (Toe/Camber)	During Test	0 mm / -1°12'	in 3 mm / -2°00'
	Standard Value	in 1 ± 2 mm / -0°30' ± 45'	in 2 ± 2 mm / -0°55' ± 45'





HKS Co., Ltd.

REV. NO.	DATE
3-1.03	5/2015